


User manual

Washing machine

cove

Control panel

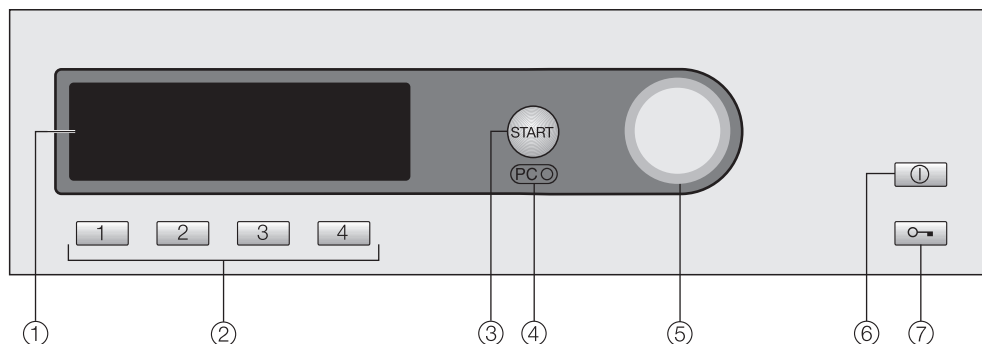

① Display

See the following pages for more information.

② Short cut buttons (keys)

For selecting an individual washing programme quickly. These buttons can be re-programmed to select your favourite wash programmes instead of the pre-set ones.

③ Start button

④ PC/Optical interface

This is used by Miele service technicians during servicing work for testing purposes.

⑤ Multi-function selector

This is used to select menu options (by turning it) and to confirm your selection (by pressing it).

⑥ On-Off button

To save energy, the machine will switch off automatically 15 minutes after the end of the programme/anti-crease phase or after being switched on, if no other selection is made.

⑦ button


Opens the machine door.

Before using for the first time

Before using the machine for the first time ensure that it is correctly installed and connected. See "Installation and connection". Also check that the drain filter is securely tightened to prevent the risk of leaks during use.

Commission the machine as described in the separate booklet "Commissioning, Programme chart and Settings" supplied with the machine.

Short instructions


 It is very important to read the "Notes and tips on laundry care" section before proceeding.

1 Sort the laundry


2 Load the drum


- Switch on the machine.

The interior drum lighting will come on.

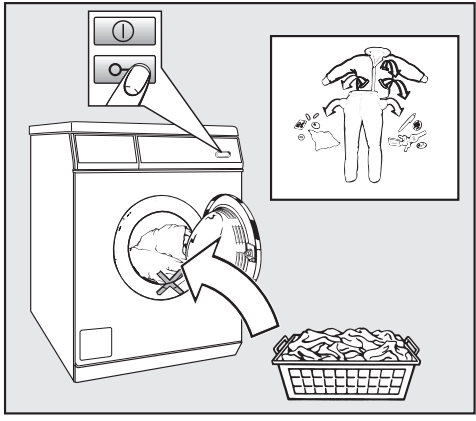

- Open the drum door.
- Unfold the laundry and load loosely into the drum.

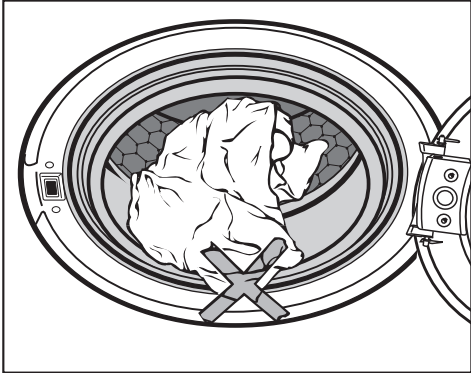

 Make sure that no items are caught between the door and the drum.

- Shut the door with a gentle swing.


③ Select a programme

Programme descriptions


- See separate booklet "Commissioning, Programme chart and Settings".

You can select a programme either by:

- using the appropriate short cut button to select one of the four programmes listed in the display ("favourites"), or

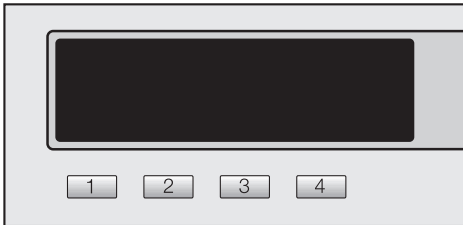

- Select the programme you require from the *Programme selection* menu.

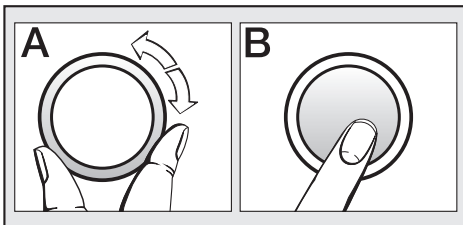

- If required, you can then select any Extras and/or *Timer* for Delay start from the relevant sub-menu.

Payment system

If your machine is connected to a payment system, the amount of credit required will appear in the display.

Credit will be lost if, after the programme has started, the door is opened or the programme cancelled (depending on how the machine was set up).

Short instructions

4 Add detergent

Take the level of soiling and water hardness into account.


Too little detergent results in:

- Laundry not getting properly clean, and with time may become grey and hard to the touch.
- Greasy particles clinging to laundry.
- Limescale deposits on the heater elements.

Too much detergent results in:

- Excessive foam which causes a low level of agitation and poor wash, rinse and spin results.
- A burden to the environment.

See "Detergent" for further information.

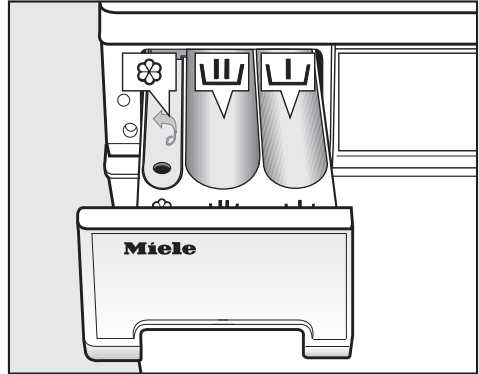

- Pull out the detergent drawer and add detergent to the compartments as follows:

☞ = Detergent for the pre-wash

☞☞ = Detergent for the main wash

☞☞☞ = Fabric conditioner, liquid starch or proofing agent

- Close the detergent drawer.

The ☞☞☞ compartment is not used during Disinfection programmes. Do not put anything in the ☞☞☞ compartment .

5 Start the programme

The *Start* button will flash as soon as a programme can be started.

- Press the *Start* button.

The Start button will now light up constantly.

The estimated programme duration will appear in the display. This will count down in one minute steps. During the first 10 minutes the machine measures how much water is being absorbed by the laundry. The programme duration may be shorter depending on this absorbency rate.

The programme sequence is also shown in the display. The machine lets you know which section of the programme has been reached.

Once washing is in progress, you can press the following short cut buttons:

- Button **1** *Extras* to select or de-select extras.
- Button **2** *Timer* to call up the current time of day and the estimated end time of the programme.
- Button **4** *Cancel* to cancel the current programme. The suds are pumped away immediately.

6 Unload the drum


If laundry is not removed as soon as the programme has finished, the anti-crease phase will begin and the drum will turn at intervals to help prevent creasing.

Anti-crease will flash alternately with *Finish* in the display.

The machine will switch off automatically 15 minutes after the end of the anti-crease phase. You will need to press the **1** button to switch it back on again.

- Press the **0** button to open the drum door.
- Remove the laundry.

Check that all items have been removed from the drum. Items left in the drum could discolour other items in the next wash or become discoloured themselves.

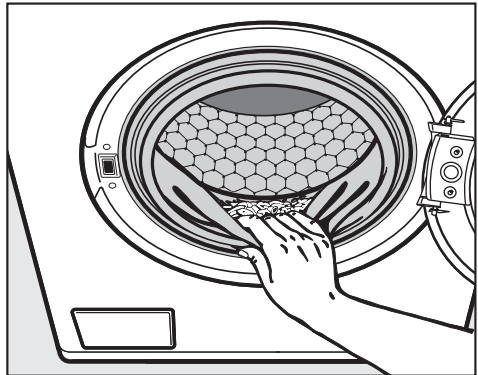


- Check the folds in the door seal for any small articles, e.g. buttons, which might be lodged there.
- Close the drum door. Otherwise there is the danger of objects being placed inadvertently in the drum. If these remained unnoticed and were washed in the next load, they could damage the laundry.
- Switch the machine off with the **1** button.

Select a programme


Selecting/changing a programme

Entry menu

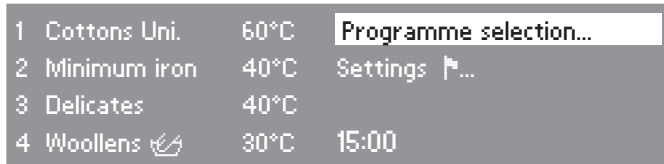

- Press short cut button .

Main menu

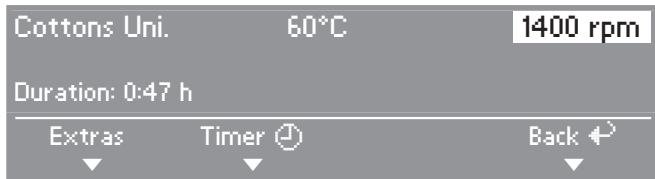

- Using the multi-function selector you can then highlight the following options in the display: Programme, Temperature or Spin speed and confirm your selection by pressing the multi-function selector.

Depending on the option highlighted, the following will be displayed:

– Programme selection




- Use the multi-function selector to select the programme you want and confirm your selection. The main menu will reappear.

Select a programme


Note: If you do not make a selection in the sub-menu within approx. 15 seconds, the display will revert to the main menu.

– Temperature selection

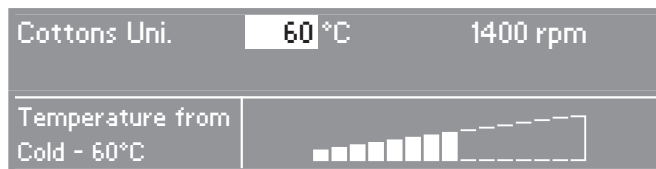

- Use the multi-function selector to select the temperature you want and confirm your selection. The main menu will reappear.


– Spin speed selection

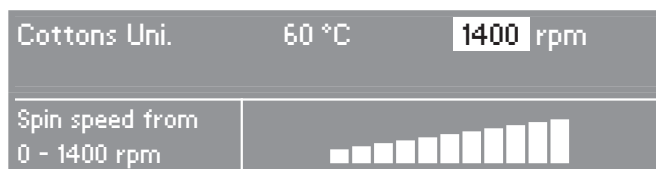

- Use the multi-function selector to select the spin speed you want and confirm your selection. The main menu will reappear.

Select an Extra option(s)

- Press short cut button . This opens the *Extras* sub-menu.

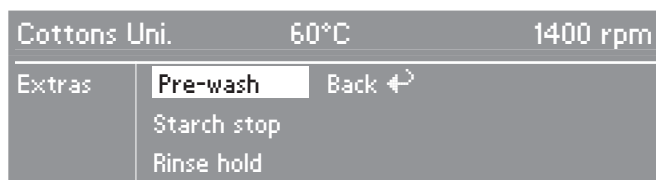

- Use the multi-function selector to select the Extra you want and confirm your selection. The main menu will reappear. Repeat the process if you want to select another extra.